

0800 50 STEEL (0800 50 78335)  
www.frametek.co.nz



**Gib / Drywall fixing to steel framing**

Internal linings should be fixed horizontally, however FRAMETEK studs are at 600crs giving the option of \*vertical fixing if required.

Fix sheets with glue and **bugle head self-drilling tek screws** or needle point screws for steel. These come either collated or uncollated and can be purchased from most suppliers – note the thread type.

Refer the bracing plan and appropriate data sheet for bracing panel fixing requirements – [www.gib.co.nz](http://www.gib.co.nz)

**Installing flat noggs.**

Extra nogging can be installed using 'Flat Head' screws as shown right; there is spare material on site for flat noggs.




Flat Head



Flat nog - face fixed

\*Please ensure that you follow the correct sequence when fixing Gib vertically. For further information refer to "GIB Steel Framing – Installation Details"

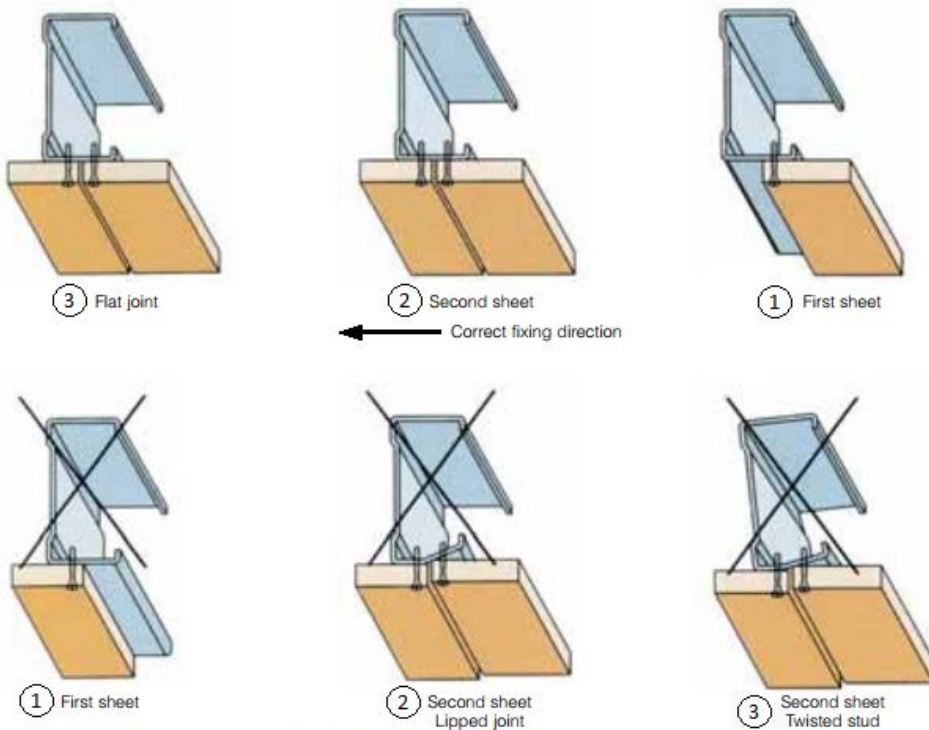

**General Check List**

- Safety first -
  - Earmuffs
  - Glasses
  - Non-slip gloves
  - Tweezers
- Aviation Tin Snips -
  - Left hand
  - Right hand
  - Straight
  - 90° offset
- Battery Drill, Impact Driver (charger)
- Cardboard for Templates
- Clamps –
  - adjustable "C"
  - adjustable Flat vice
- DPC
- Driver Bits –
  - 8mm Hex (short)
  - 8mm Hex (long)
  - Phillips
  - Extension
- Frametek Construction Manual – Please download from [www.frametek.co.nz](http://www.frametek.co.nz)**
- Glue adhesive
- Hole saw  $\phi$ 34mm
- Hole punch
- Magnetic –
  - Level
  - Stud finder
- Permanent Markers
- Set Square
- Silicon –
  - pipes to grommets
- Tape measure
- Utility Knife (snap blade)
- Vacuum for Swarf