



0800 50 STEEL (0800 50 78335)  
www.frametek.co.nz

**Flat Nog Support**

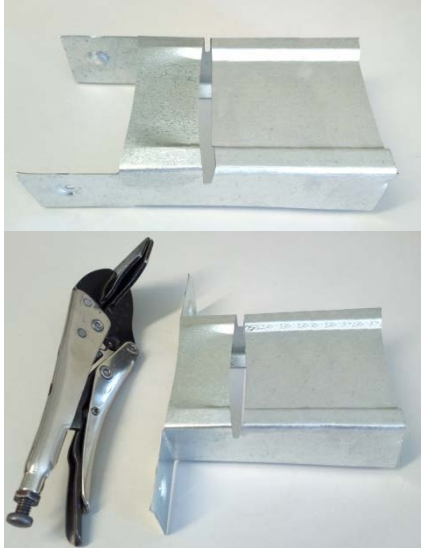

1. Bend tabs at 90°

**Support in position**

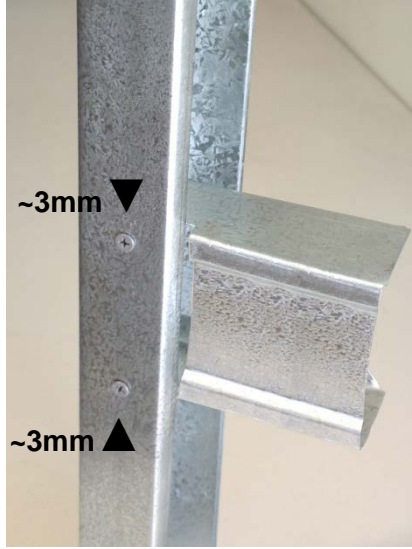

2. Clamp & fix close to Support edges (3~5mm to centre)

**Clamp & Fixings**



**General  
Check List**

Safety first -  
Earmuffs  
Glasses  
Non-slip gloves  
Tweezers

Aviation Tin Snips -  
Left hand  
Right hand  
Straight  
90° offset

Battery Drill, Impact  
Driver (charger)

Clamps -  
adjustable "C"  
adjustable Flat

Driver Bits -  
Phillips

[Frametek Construction  
Manual -  
Please download from  
www.frametek.co.nz](http://www.frametek.co.nz)


Permanent Markers

Pop-riveter


Tape measure

Vacuum for Swarf

**Multi-purpose Flat Nog – shown fitted for a “Wing-back” application**

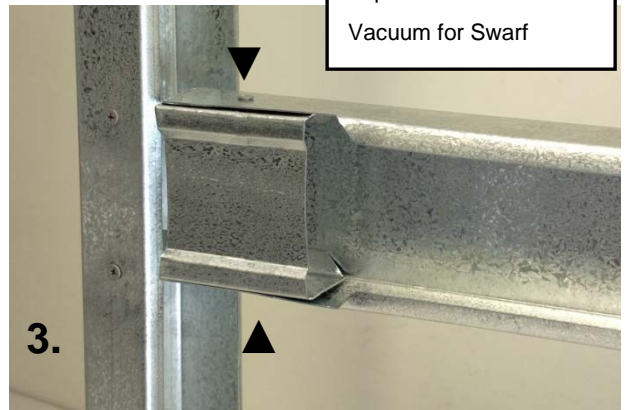

3.

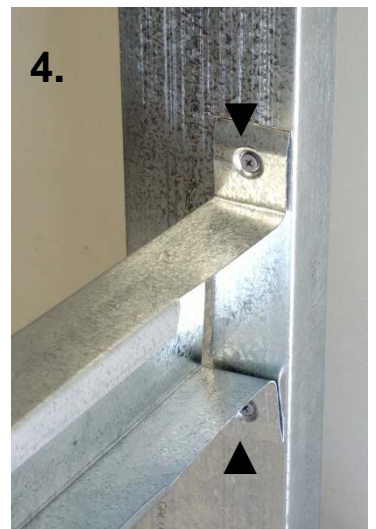

4.

**Next**

3. Either remove tabs (Above Left) to fit over Nog Support as shown or
4. Bend tabs (Above Right) at 90° for face fixing – clamp & fix in place.
5. For more rigidity, fix the Flat Nog Support tabs shown in 1. above to stud.
6. For rangehoods and hand rails, ‘flip’ the Multi-purpose Flat Nog & fit flush.